HermanMiller

Setu® Chair



Seating that performs for you.

Seat Height: Lever on right side of chair





To raise seat:

Take your weight off chair, press lever up.



To lower seat:

While seated, press lever up.

At the proper height, your feet should rest flat on the floor.

HermanMiller Setu* Chair 1 Adjustment Guide