




Tools Required:




T-20 Torx Driver




Flat Screw Driver


Steps:

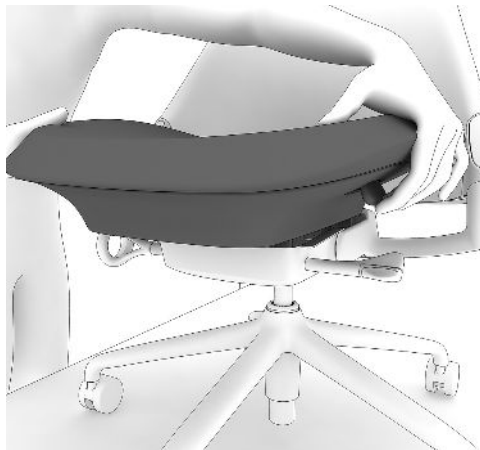


1. Release the seat lock
move seat to the forward
position.

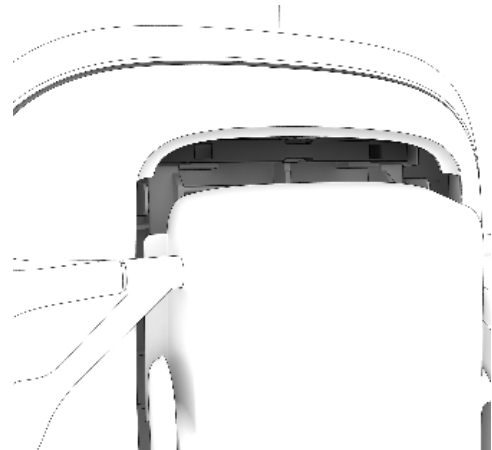


2. Lay chair on back.

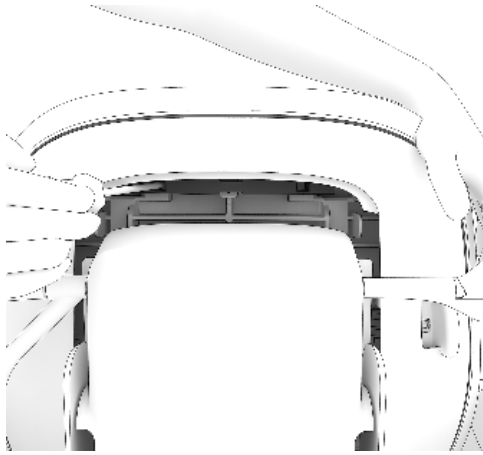


3. Using flat head screw driver pry away (both sides until seat lock bar comes out).

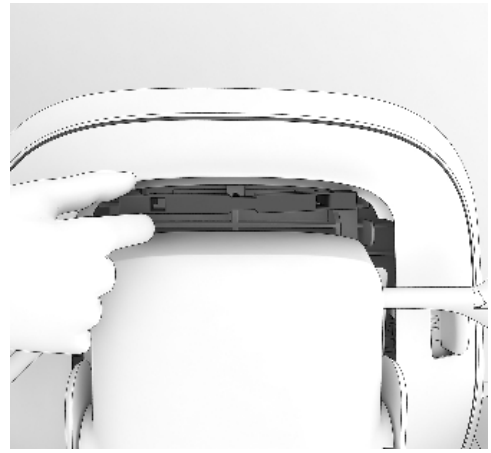


4. Remove lock bar.

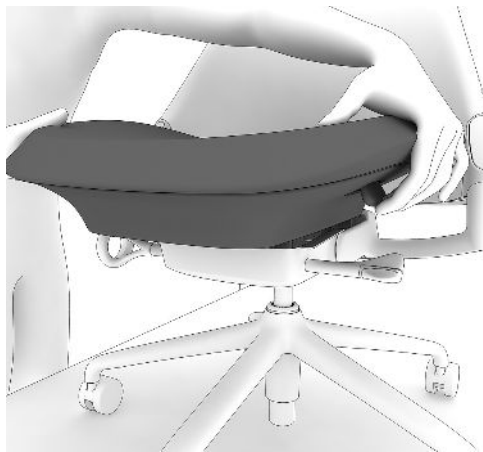


5. Release the seat lock move seat to the backward position.

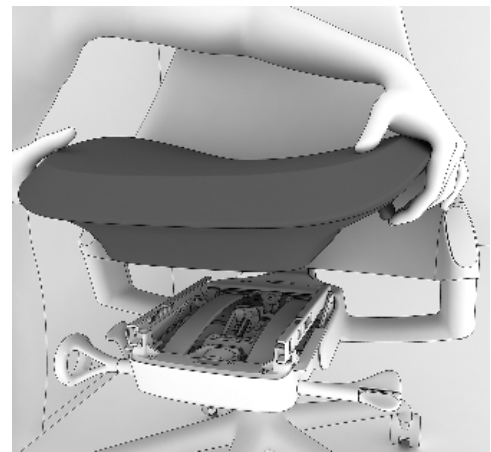

6. Lift upward to remove.

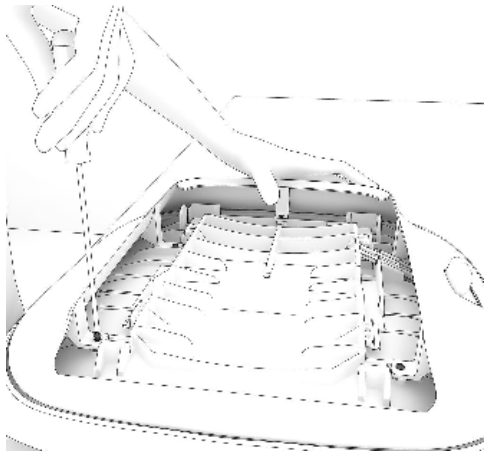


7. Remove all 4 T-20 torx screws.

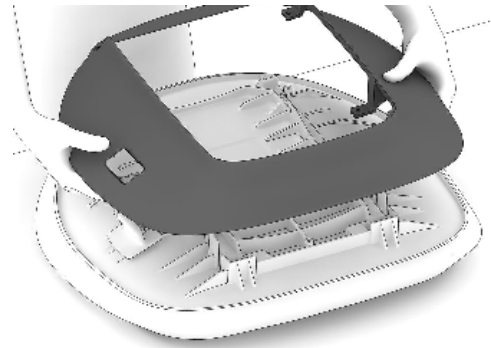


8. Remove trim. Trim is also held on by 4 clips. Carefully pull the trim loose from these clips. With screw driver pry out and remove any clips that remain lodged in the seat.


New Seat Skirt Installation:

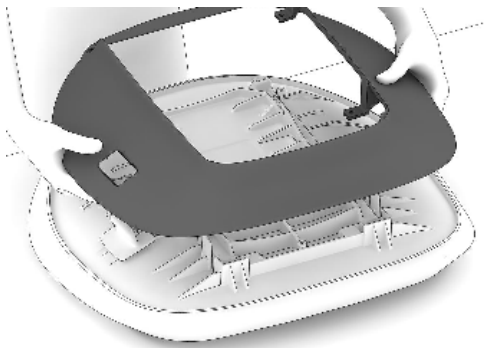


1. Place trim. Push onto seat to engage 4 clips.

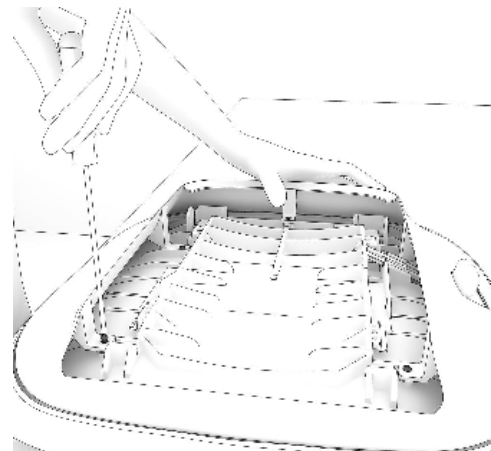

2. Using a T-20 torx tighten all the screws. 9.5 in.lbs 1 N.m

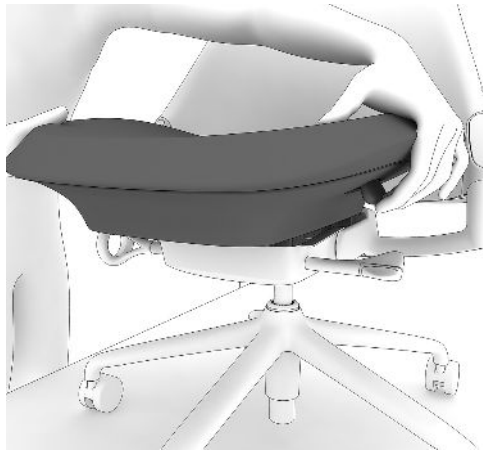


1. Release the seat lock lever, place the seat all the way to back and slide forward.

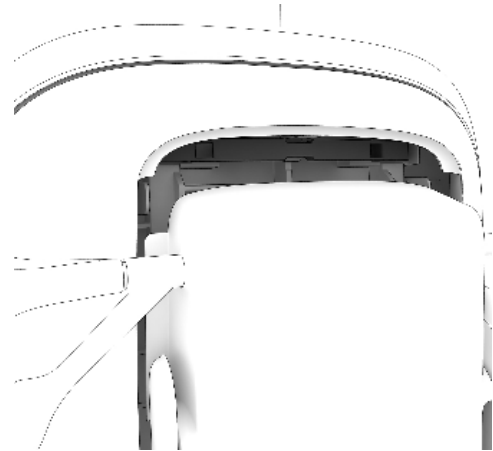

2. Lay chair on back.



3. Place the seat lock lever and press down to fit into position.

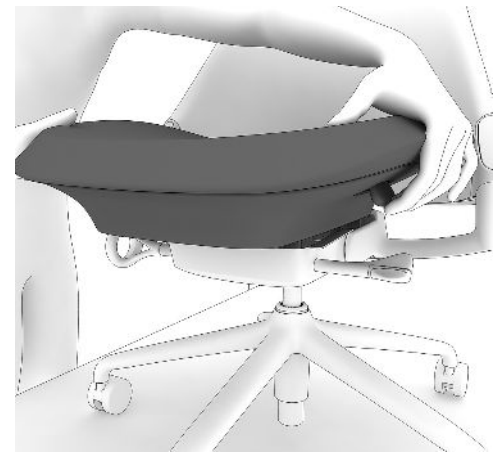

4. Release the seat lock, move seat to the backward position to fit the seat into position.